

NAME/COMPANY:

PHONE:

JOB NAME:


JOB #:

DATE:




**StoneWall
SELECT**

ICD CORPORATION
INNOVATIVE CONCRETE DESIGN
3934 NORTH RIDGEFIELD CIRCLE
MILWAUKEE, WI 53211
(414) 962-4065

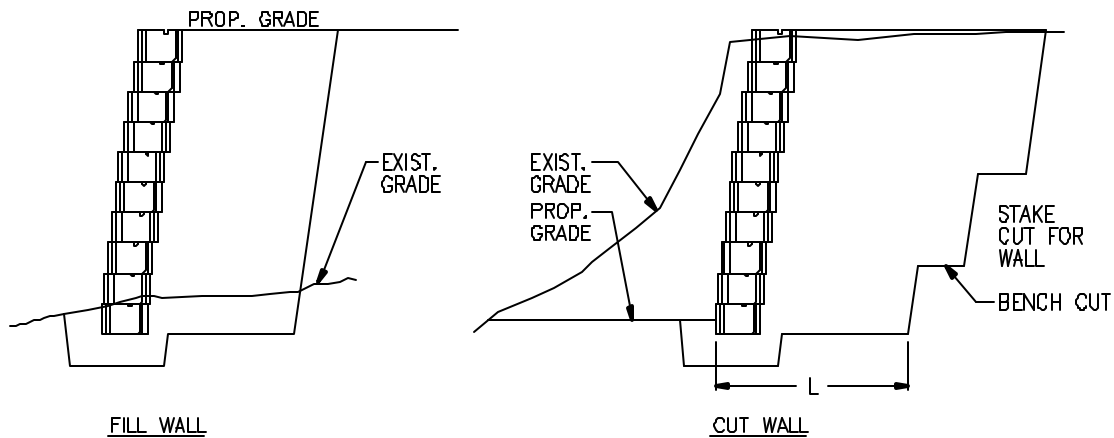


A. WALL LAYOUT AND GENERAL EXCAVATION

1. SURVEY STAKE SWS LOCATION AND GENERAL EXCAVATION LIMITS FOR WALL CONSTRUCTION.
2. ENSURE SWS IS ALONG PROPER ALIGNMENT, AND WITHIN APPROPRIATE PROPERTY BOUNDARIES, AND CONSTRUCTION EASEMENTS.
3. PERFORM GENERAL EXCAVATION FOR WALL.

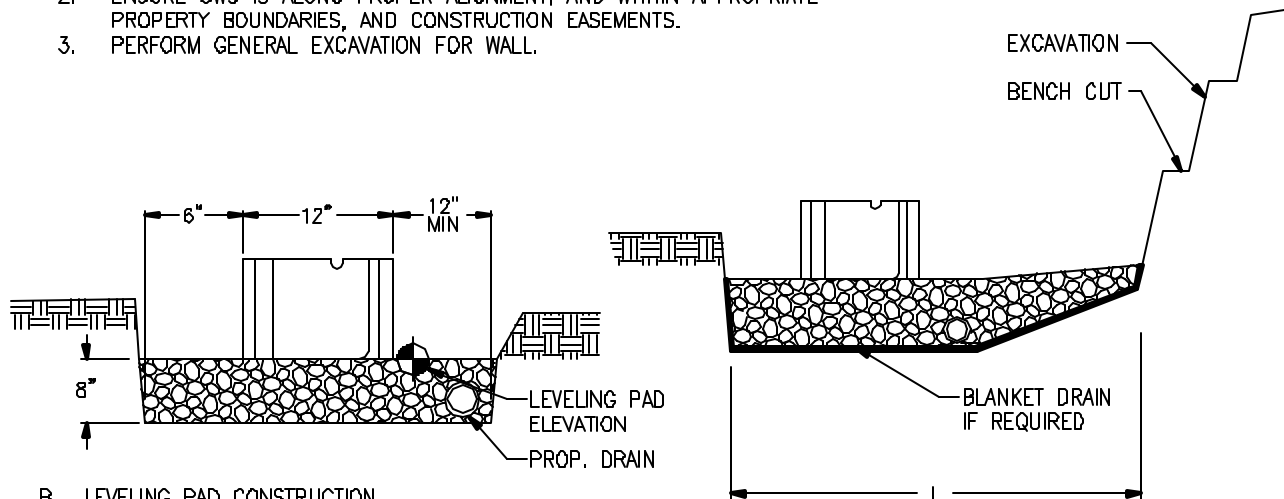

B. LEVELING PAD CONSTRUCTION

1. STAKE WALL LOCATION FOR LEVELING PAD EXCAVATION.
2. EXCAVATE TRENCH TO CREATE A MIN. LEVELING PAD THICKNESS OF 6" AND TO THE MINIMUM WIDTH SHOWN.
3. INSTALL DRAIN PIPE WITH POSITIVE GRAVITY FLOW TO OUTLET.
4. PLACE, LEVEL AND COMPACT LEVELING PAD MATERIAL FOR SWS UNITS
5. PLACE AND COMPACT AGGREGATE BLANKET DRAIN, INSTALL GEOTEXTILE IF REQUIRED.



CONSTRUCTION SEQUENCE – STEP 1

EXCAVATION AND LEVELING PAD

SEE DETAILS 099-011 TO 099-015