


# StoneWall SELECT<sup>®</sup>

## Installation Manual Addendum

# Installing 90° Inside Corners

### 1st Course

While the 4x8x12 inch corner filler piece is not mandatory, it does provide the perfect spacing for building the wall on running bond (half bond).

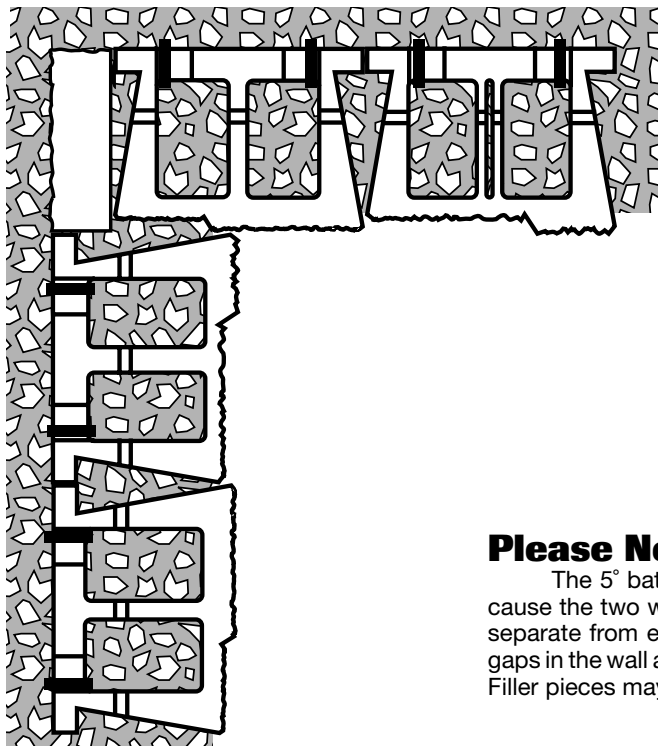


### Please Note:

The 5° batter in the wall system will cause the two walls forming the corner to separate from each other. This will create gaps in the wall after a few courses are laid. Filler pieces may be required.

### 2nd Course

While the 4x8x12 inch corner filler piece is not mandatory, it does provide the perfect spacing for building the wall on running bond (half bond).

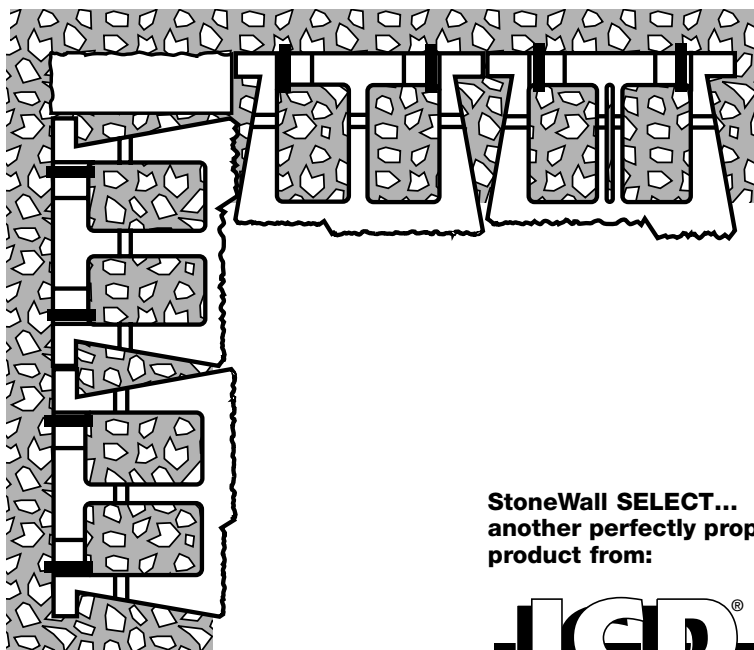

StoneWall SELECT...  
another perfectly proportioned  
product from:



Web Site [www.selecticd.com](http://www.selecticd.com)  
Toll Free 800 / 394-4066